



## Z-BAR CLEAT INSTALLATION


REAR MOUNTED FRAME

Z-BAR CLEAT



### STEP 1.

LEVEL YOUR Z-BAR CLEAT AND ATTACH SECURELY TO WALL USING FLATHEAD SCREWS TO ALLOW ARTWORK TO HANG PROPERLY.

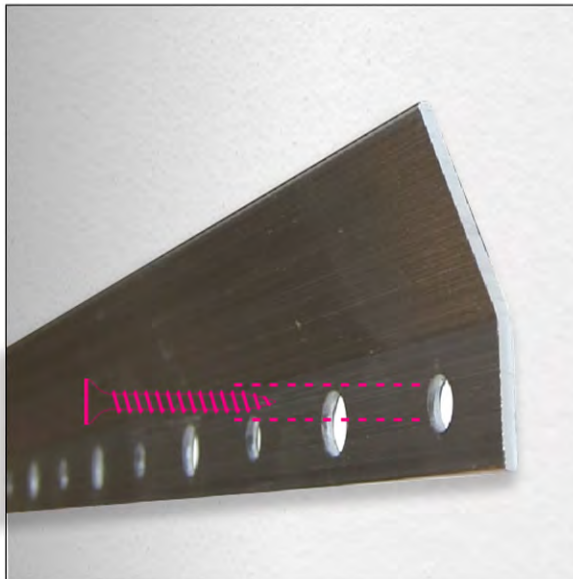

### STEP 2.

HANG ARTWORK BY INSERTING THE Z-BAR CLEAT INTO THE CHANNEL OF RECESSED FRAME.

